


SPECIFICATION

Model No.: AG-2061

Main supply	220-240V~50、 60Hz
Rated power input	1500W

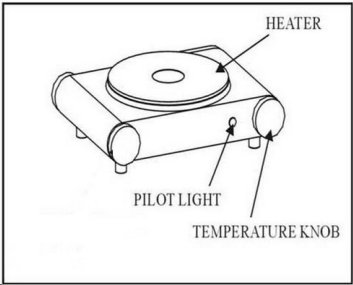

DISPOSAL

Waste electrical products must not be disposed of with household waste. This equipment must be returned to the retail store for safe disposal. DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



HOT PLATE USER MANUAL



Read the manual carefully and keep it for future use.

IMPORTANT SAFETY INSTRUCTIONS

- Read the manual carefully before use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- Under no circumstances must the appliance be placed immersed in water or other liquid, or come into contact with such. Do not use the appliance with wet or moist hands.
- Before connecting of the appliance check that voltage indicated on the rating label corresponds the mains voltage in your home.
- It's advised no continuous operation more than 1 hour each time for longer product life.
- Do not use the appliance outdoors.
- Use the appliance only for the intended purpose.
- Always remove the plug from the power supply whenever the appliance is not in use, before cleaning the appliance or whenever a disturbance occurs. Switch off the appliance beforehand. Pull on the plug, not on the cord.
- In order to protect children from the dangers of electrical appliance shock, never leave them unsupervised with the appliance. When selecting the location for your appliance, do so in such a way that children do not have access to the appliance. Take care to ensure the cord does not hang down.
- Test the appliance and the cord regularly for damage. If there is damage of any kind, the appliance should not be used.
- Keep the appliance and the cord away from heat and moisture.
- Never leave the appliance unsupervised. Switch off the appliance whenever you are not using it, even if this is only for a moment.
- Should If the appliance become moist or wet, remove the mains plug from the power supply immediately.
- **For the first time operation, there will be some smoke or smell. This situation happens properly. Don't be scared.**

Page 2

SAVE THIS INSTRUCTION

HOW TO USE

- Place the appliance on a flat, dry and heat-resistant surface.
- Turn the temperature knob to “OFF” position.
- Put the plug into the power supply.
- Switch on the appliance by turning the switch knob to “MIN” position and the temperature knob to the desired setting. The appliance cycle on and off to maintain the setting temperature. The pilot light goes on when the appliance is working.
- The appliance will be very hot. DO NOT touch the surface while in use or it has not cooled down completely.
- Unplug the appliance when not in use and let it cool down.

CAUTIONS

- DO NOT use unstable pan. Use pan with flat bottom to insure full contact with the hot plate for maximum heat efficiency.
- Avoid dropping any liquid on the plate for long-life performance.

CLEANING AND MAINTENANCE

- Always unplug from wall socket before cleaning.
- Never immerse the appliance, cord or plug in water or other liquids.
- Clean the outside with a damp cloth. Use washing-up liquid in case of hard stains.
- Do not use scratching cleaning agent.

Page 3